

Addendum (dated 16-11-1993) to document No. 9922 154 13061

"Auto answer" mode

This section describes the actions to be performed in order to enable the "Auto answer" mode. The "Auto answer" mode enables the secure transmission of facsimile messages to a SPENDEX 40 without operator assistance at the receiving end. In this mode, a SPENDEX 40 automatically goes off hook when called. After the SPENDEX 40 has gone off hook, it will send an "Auto answer" tone for 2 s. The calling party may now establish a secure data link in the usual way (select a Net variable, press SECURE push button and press DTE key after reaching the secure voice mode) and send a facsimile message to the "Auto answer" SPENDEX 40.

Actions	Display	Remarks
Start conditions		
<ul style="list-style-type: none"> - Terminal on hook - CIK module connected - Facsimile equipment connected and switched on 	"* "	
<ol style="list-style-type: none"> 1. Press # key and go off hook (lift handset) within 3 s. Place handset beside the terminal. 	"AUTO ANS"	(See Note 1)

- Note 1:** Check the starting condition if the SPENDEX 40 fails to enter the "Auto answer" mode.
- Note 2:** The handset must stay off hook in the "Auto answer" mode. Go on hook (replace handset) to restore normal operation of the SPENDEX 40 (Disable "Auto answer" mode).
- Note 3:** Voice traffic (either in plain or crypto) is disabled at the "Auto answer" SPENDEX 40. The "Auto answer" SPENDEX 40 will go on hook after 20 s if the calling party fails to go secure within that time. It also will go on hook after the sync acquisition has failed due to incompatible Net variables or because the calling party has gone on hook.
- Note 4:** If the facsimile equipment is disconnected after enabling the "Auto answer" mode, the SPENDEX 40 will not go off hook automatically when called.