ELECTRONIC TYPEWRITER

ART. E115

HENO®

USER'S MANUAL

Pn = 7,2 W
Un = 6 x 1,5 V (IEC LR14)
⎓ (DC)

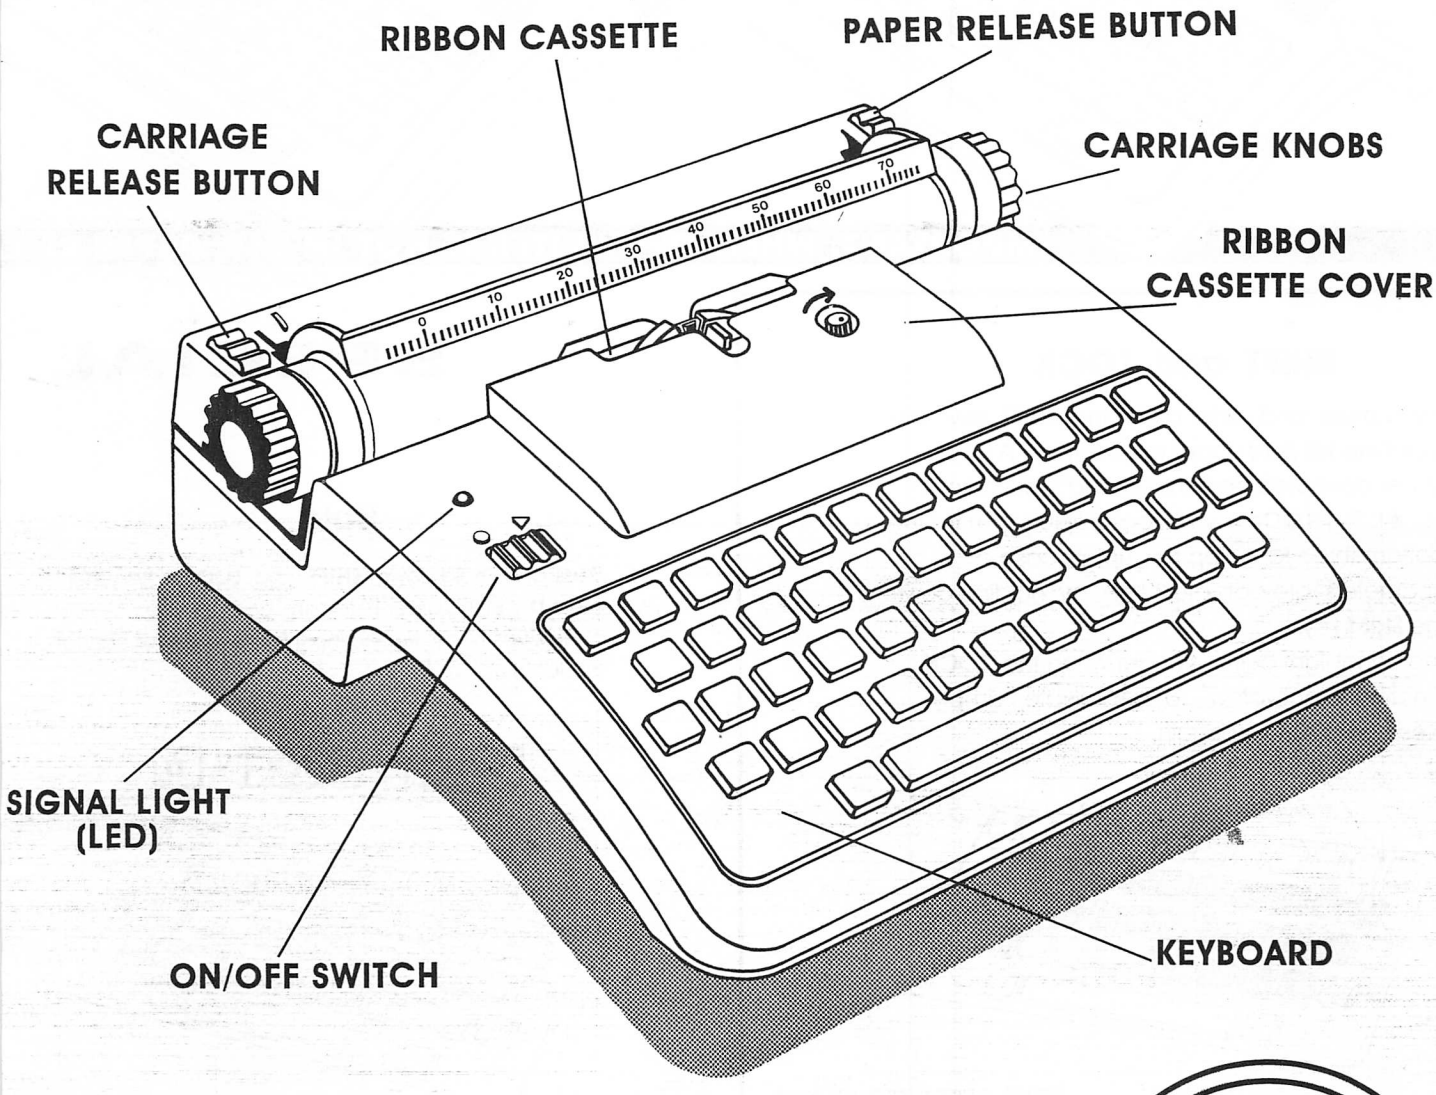

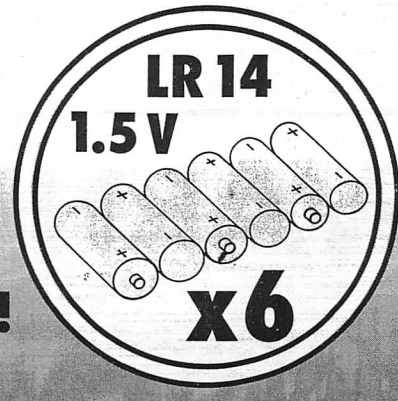

WARNING!

USE NEW ALKALINE BATTERIES ONLY !

USER'S MANUAL

Insert paper under the PAPER BAR as indicated, by turning the KNOBS to put it in propper position.

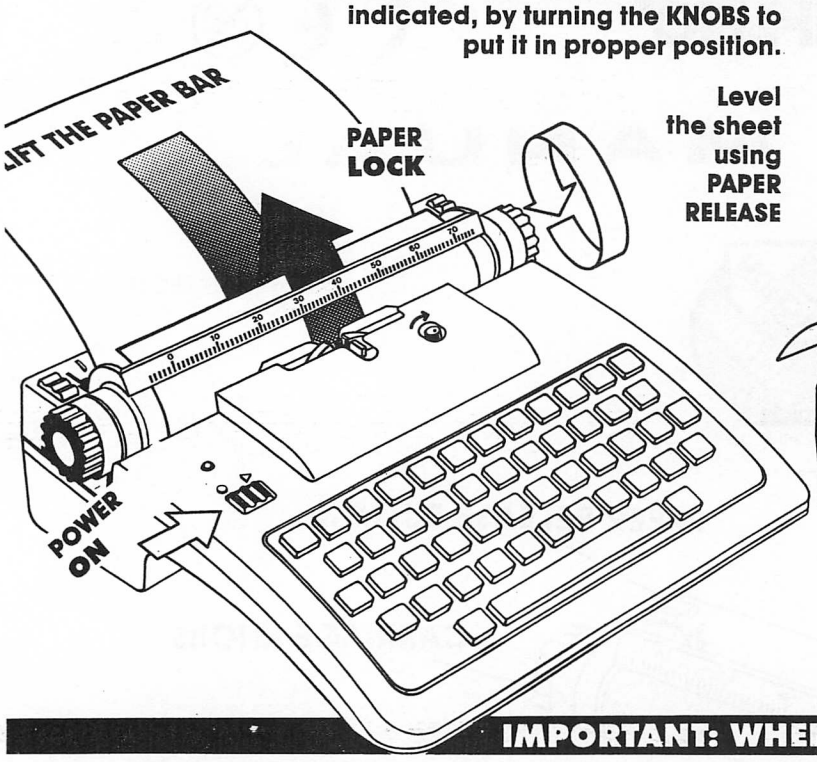

Level the sheet using PAPER RELEASE

1. Advance paper to the next line.

2. Return the CARRIAGE to correct position to begin a new line.

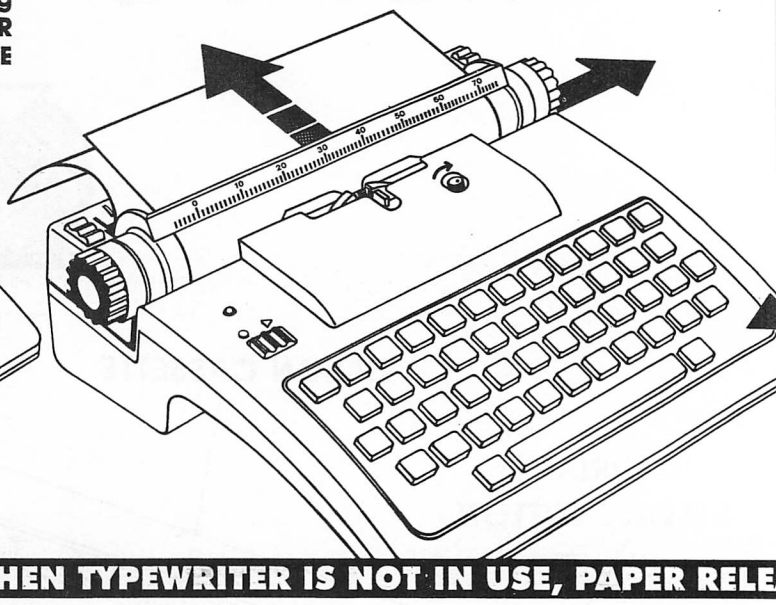

IMPORTANT: WHEN TYPEWRITER IS NOT IN USE, PAPER RELE

SHIFT and LOCK

If you press and hold down the **SHIFT** key , the machine will print upper case letters (**A**), or upper carracters on number and symbol keys (**!** , **#** , **%**). **LOCK** key will lock this function for the bottom three rows. Top row upper case characters are activated only by holding down the **SHIFT** key.

The signal light burns stronger when the **LOCK** function is activated . To deactivate , simply press the **LOCK** key again.

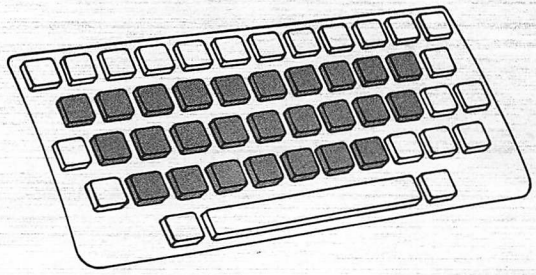

KEYS AFFECTED BY THE LOCK FUNCTION

SPECIAL

Bold

Press and hold down **SHIFT** and **LOCK** keys , then press **D** (in this order) , to print each of the characters twice. Repeating this operation will cancel the function.

SHIFT + **LOCK** + **D**

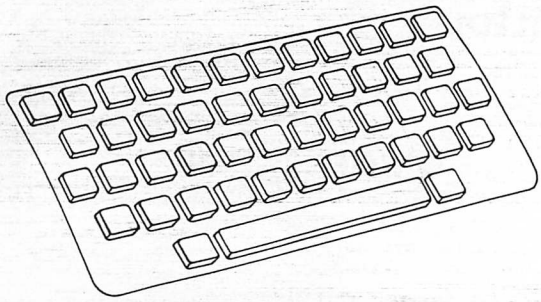

ALL FUNCTIONS CAN O

WARNING!

OLD, USED AND RE-CHARGEABLE (i.e. nickel cadmium) BATTERIES ARE NOT SUITABLE!

ELECTRONIC TYPEWRITER

CARRIAGE RELEASE will allow you to move the CARRIAGE to any desired position.

FORCING THE CARRIAGE MAY CAUSE DAMAGE TO THE EQUIPMENT!

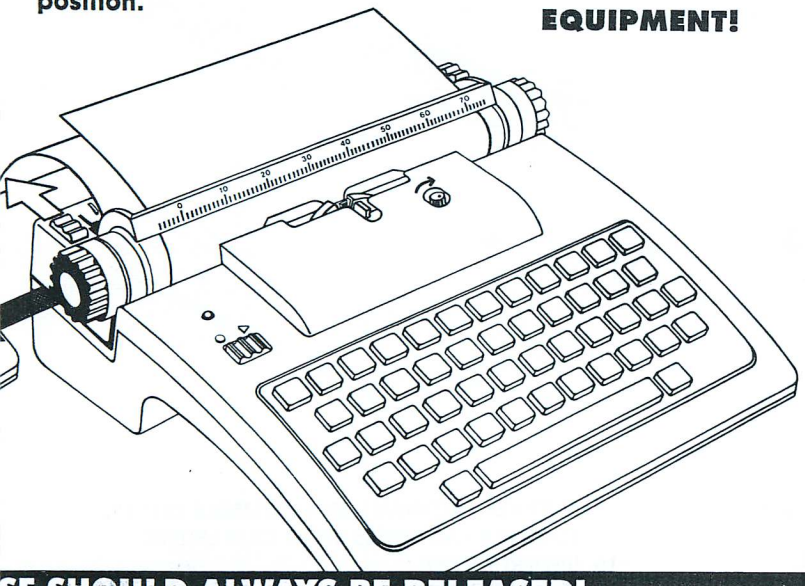

SE SHOULD ALWAYS BE RELEASED!

CHANGING THE RIBBON CASSETTE:

1. Remove cassette cover.
2. Press the area indicated by the circle and remove the cassette. Insert the new cassette, left side first.
3. We recommend that you turn the cassette drive spindle clockwise to facilitate the union of the cassette mechanism with that of the typewriter.

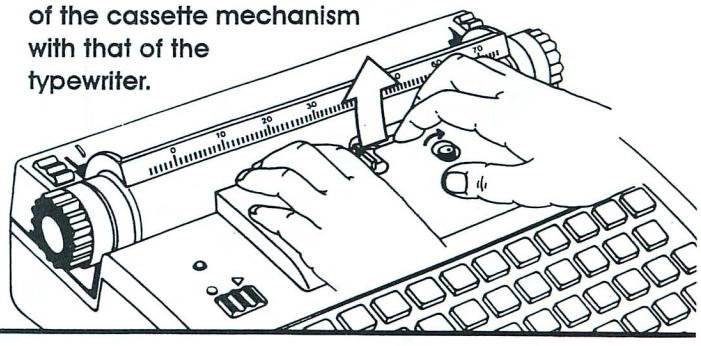

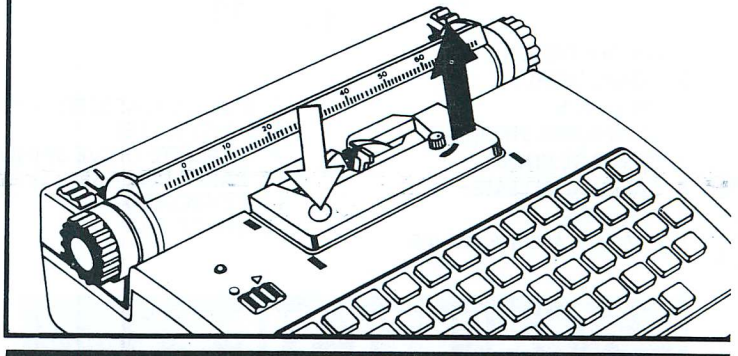

FUNCTIONS

Spacing

Press and hold down **SHIFT** and **LOCK** keys, then press **S** (in this order) , to automaticly leave a character space after each character typed. Repeating this operation will cancel the function.

SHIFT + **LOCK** + **S**

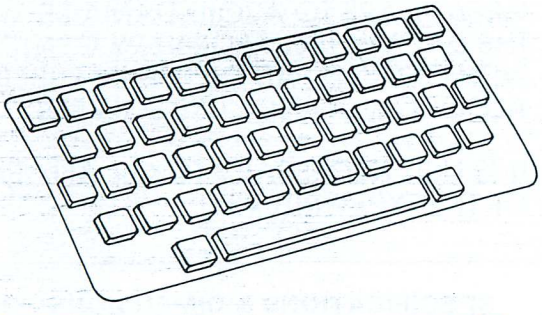

Underline

Press and hold down **SHIFT** and **LOCK** keys , then press **U** (in this order), to underline each character. Repeating this operation will cancel the function.

SHIFT + **LOCK** + **U**

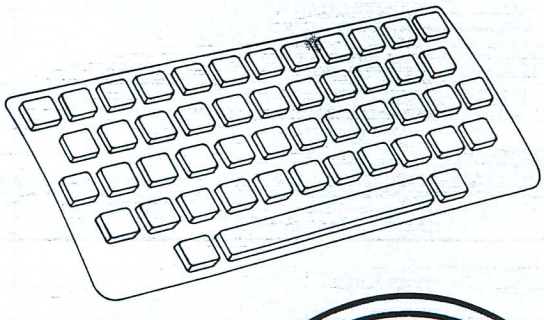

ERATE AT THE SAME TIME.

WARNING

- Do not use re-chargeable batteries (i.e. nickel cadmium).
- Use only the correct recommended batteries in this toy.
- Alkaline batteries are recommended.
- Batteries are to be inserted with the correct polarity.
- Change all batteries. Do not use old and new ones together. Do not mix different types of battery (i.e. alkaline and zinc carbon).
- Batteries must only be changed by an adult.
- You should not leave discharged batteries in the battery compartment.
- In case you do not intend to use this toy for a long time, please remove the battery.
- Batteries must not come into contact with metal parts as this may cause an explosion.
- Never try to charge batteries.
- Do not throw batteries into a fire.
- Please dispose the empty batteries into appropriate containers.
- Do not short-circuit the supply terminals.

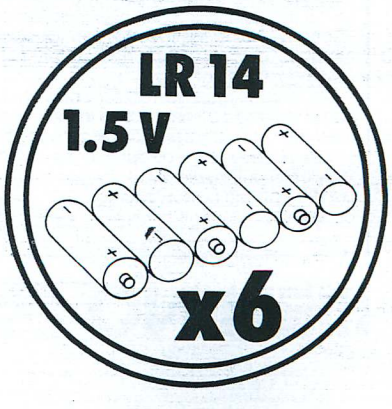

USER'S MANUAL

PARTS OF THE TYPEWRITER

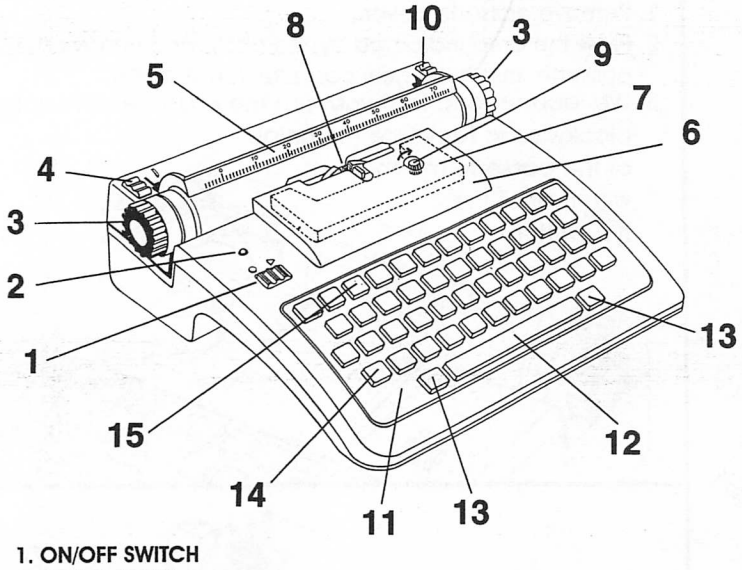

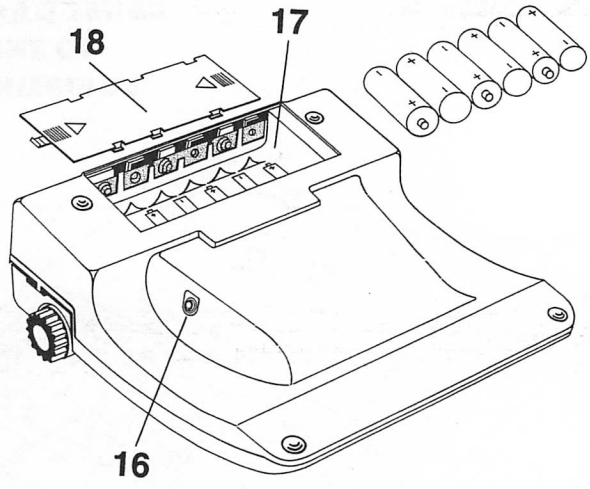

1. ON/OFF SWITCH
2. SIGNAL LIGHT :
   ON-LIGHTS
   LOCK-BURNS STRONGER
3. CARRIAGE KNOBS
4. CARRIAGE RELEASE
5. PAPER BAR
6. RIBBON CASSETTE COVER
7. RIBBON CASSETTE (COD. E113)
8. DAISYWHEEL
9. CASSETTE DRIVE SPINDLE
10. PAPER RELEASE
11. KEYBOARD
12. SPACE BAR
13. SHIFT KEY - ACTIVATES UPPER SYMBOLS ON KEYS
14. LOCK KEY - ACTIVATES UPPER CASE LETTERS
15. UNDERLINE KEY
16. Ø 3.5 MONO PLUG
17. BATTERY COMPARTMENT
18. BATTERY COMPARTMENT COVER

SAFETY TIPS :

WATER
DO NOT use this typewriter near water or in places where water is likely to come into contact with it.

OBJECT AND LIQUID ENTRY
Precautions should be taken so that objects do not fall on and liquids are not spilled into typewriter's enclosures through openings.

VENTILATION
Typewriter needs to recive proper ventilation.

TEMPERATURE
Typewriter is sensitive to extreme temperatures. Avoid situating near heat sources such as radiators, stoves or other appliances emanating heat. Similary, do not expose to extremely cold temperatures.

INACTIVITY PERIODS
Batteries should be removed when the typewriter is left unused for a longer period of time.

STORAGE
Typewriter should be kept free of dust. It is recommended to store the typewriter in its original packaging.

USING AN ADAPTOR
- Use only an adaptor which has on output 9 V d.c. ⎓ 800 mA whith a plug of (3,5 mm and which complies with European standard EN 60742.
- Adaptors not to this specification will cause permanent damage to the typewriter and will result in non-existent or faint typing.
- The adaptor is not a toy.
- The adaptor must be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of damage, the toy must not be used with this adaptor until the damage has been repaired.
- Insert the plug of the adaptor in the outlet on the right side of the typewriter. This action automatically disconnects the battery source of power.

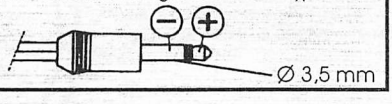

MAINTENANCE :

1. BEFORE YOU DO ANY CLEANING, SWITCH THE UNIT OFF OR DISCONNECT THE ADAPTOR.
2. CLEAN WITH DUMP CLOTH ONLY. NEVER USE SOLVENTS OR IMMERSE IN WATER.
3. AVOID CLEANING THE DAISYWHEEL UNLESS ABSOLUTELY NECESSARY. IF IT DOES BECOME NECESSARY, EXERT GREAT CARE TO AVOID DAMAGE. WIPE THE DAISYWHEEL FACE VERY GENTLY WITH COTTON PAD DIPPED IN RUBBING ALCOHOL. DO NOT USE SOLVENTS.
4. IT IS NOT NECESSARY TO OIL ANY PART OF THE TYPEWRITER.

SPECIFICATIONS & DIMENSIONS

Character width: 2.54 mm
Page format: **A4**
Maximum number of characters per line: 68
Keyboard: 48 keys and space bar key
Daisywheel: 90 different characters
Power supply: **6 alkaline LR 14** batteries **1.5 V (NOT INCLUDED)**
adaptor **9 V AC/DC ⎓ 800 mA (NOT INCLUDED)**
Dimensions: width 270 mm, height 105 mm,
length 270 mm, weight 1210 gr.

MEHANO®
Toys, stationery metal and plastic goods factory
MEHANO, 6310 Izola, Polje 9, Slovenia
Tel.: ++ 386 66 6080 • Fax: ++ 386 66 608101
http://www.mehano.si • E-mail: sales@mehano.si

E 115 Z04AB / 22172 ANGLIJA - 4/98